



DMK 802LX

LIGHTING MANAGEMENT MODULE 230 V_{AC}

This installation manual has been written by the manufacturer and it is considered integrating part of this product.

The information included are intended for the expert technicians who execute the installation and the extraordinary maintenance of the product.

The expert technicians must have specific competences and particular abilities in order to carry out correctly and safely their work.

The constant observance of the information included in this manual guarantees safety of men, energy serving and a longer duration of product operative-life.

In order to avoid wrong handling and the consequent risk of accidents, it is important to read this manual carefully, keeping scrupulously to guidelines according to the supplied information.

CONFORMITY DECLARATION

All the devices of the YACHTICA® system are designed in order to comply the directives:

- **EN 60945 Maritime navigation and radiocommunication equipment and system.**
- **IEC 61000;**
- **IEC 60068;**
- **IEC 60695;**
- **Rules for the Classification of Ship - Part C - Machinery;**
- **Systems and Fire Protection - Ch. 3, Sec. 6, table 1.**

TYPE APPROVAL RINA: N° DIP534725CS

All the devices of the YACHTICA® system are tested and found to comply with the specification of the CE marking.



All brand names, product names and trademarks are property V.Y.C. Srl.
©2026 V.Y.C. Srl

CONTENTS

DESCRIPTION	PG 4
FEATURES	PG 5
APPLICATIONS	PG 6
TECHNICAL SPECIFICATIONS	PG 7
MODULE DESCRIPTION	PG 8
DISPLAY DESCRIPTION	PG 12
INSTALLATION	PG 15
WIRING DIAGRAMS	PG 17
PROGRAMMING	PG 19
PROBLEM SOLVING	PG 20
REPAIR AND WARRANTY POLICIES	PG 23



DESCRIPTION

The DMK 802LX is a module with an integrated programmable microcontroller used for dimming or on/off control of 230Vac (dimmable) light sources equipped with 2 power outputs.

The module allows the control and management of incandescent, halogen, electronic or toroidal transformer light sources. It can be used to drive modern LED bulbs as long as they are dimmable. The maximum current that can be supplied by each output is 2A. It is not possible to control energy-saving light sources except in on/off mode.

The module has 8 fully programmable clean contact inputs for wiring buttons and sensors, with which it is possible to control individual outputs and/or recall global scenarios.

The module can be used both in stand-alone mode and connected, via the EasyBUS system BUS, to other modules of the YACHTICA® system and can be easily programmed, allowing the creation of global scenarios

FEATURES

2 Dimmer or On/Off 230Vac outputs

Each channel allows a dimming or an on/off control dimmable 230V LED bulbs, incandescent, halogen or electronic/magnetic lighting sources. The choice of the modality can be done by the display on the front panel or by the Yachtica® programming Cabot. The dimming mode can be chosen between Trailing Edge (default) or Leading Edge.

8 Programmable dry contact inputs

The module allows single output or light scene control using the 8 dry contact inputs where push-buttons or sensors can be connected. The inputs are programmable using the YACHTICA® software Cabot.

EasyBUS communication

The module is able to communicate with other devices of the YACHTICA® automation system when connected inside an EasyBUS network. The removable EasyBUS connecting block is used to link the module to the other modules of the same EasyBUS network.

Cabot programming software

The module can be programmed, managed and monitored using the YACHTICA® software Cabot.

Stand-alone mode

The module has a standard programming that allows to manage outputs and light presets, connecting push-buttons or sensors to the dry contact inputs.

Short circuit and overload advanced protection

Each single output is protected by an advanced monitoring system that is able to recognize a short circuit, disabling and protecting the module. The module also has an overload management system that avoid the outputs to be damaged, automatically reducing the outputs percentage value if needed.

NOTE: the module does not protect the load connected to the outputs. it suggested to protect the outputs properly, according to the project requirements

Opto-isolation between electronic and power

Module electronic power supply and output power are opto-isolated in order to avoid interferences on the outputs.

Programming, control and monitoring display

By the use of the display on the front panel it is possible to manage the 4 outputs and set some module parameters.

DIN rail installation

The DMK 802LX module can be installed into an electrical switchboard using DIN rail. Once installed and the switchboard closed, the module's front panel, with control buttons and the display, is still accessible.


Detachable terminal block

All the terminal block of YACHTICA® modules are detachable, allowing a simple wiring and a quick replacement without the need to disconnect any cable, with a high level of security and stability of the system.

Tropicalized electronic

All the YACHTICA® modules have a tropicalization treatment in order to prevent a deterioration due to the humidity and sea mist.


APPLICATIONS

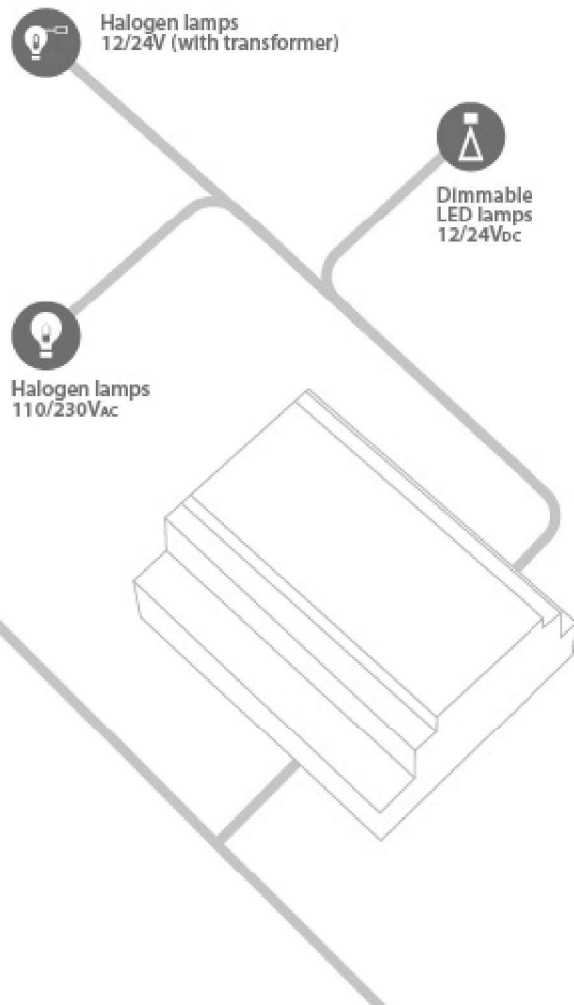

TECHNICAL SPECIFICATIONS





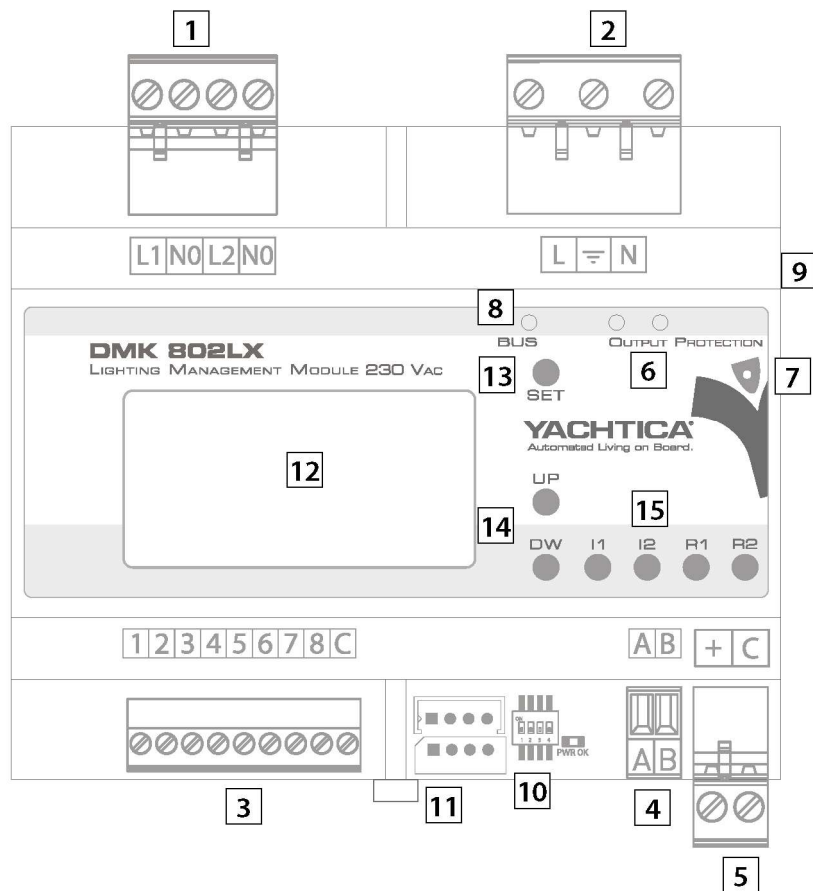

SPECIFICATION	DETAILS
Electronic power supply	20-28V _{dc}
Electronic requirements	0,6W (20mA @24V _{dc})
Outputs power supply	180-250V _{Ac}
Outputs	2
Dry contact inputs	8
Load ratings	- Incandescent/halogen lamps: 400W; - Electronic transformer for low voltage halogen lamps: 100W (TRAILING EDGE); - LED lamps: 100W/200W (depends on the lamp) (TRAILING EDGE); - 230V LED strips: 200W (TRAILING EDGE).
Default address	32
Working temperature	+5°/+55° C (41°/122° F)
Storage temperature	-40°/+70° C (-40°/+158° F)
Humidity	15%/90% non condensing
Heat dissipation (@Ta=40°C, maximum load)	- Standby: 2,8W - Max Load: 3W/canale
IP Protection	IP20
Enclosure	Self-extinguishing UL94-V0
Color	RAL 7024
Dimensions (LxHxD)	106x58x90 mm (6M DIN module spaces)
Weight	490g
Compliance	CE; EN60945; EN61000-4-2; EN61000-4-3; EN61000-4-4; EN61000-4-5; EN61000-4-6; EN61000-4-8; EN61000-4-11; CISPR 16-1-1; EN 60695-11-5; IEC60068-2; IEC60068-6; IEC60068-30; RINA Rules 2018 Pt. C, Ch. 3, Sec.6.




MODULE DESCRIPTION



#	CONNECTORS, LED, INDICATORS	DESCRIPTION
1		<p>4 poles detachable connector; Maximum cable section: 2,5mm² (12AWG); Outputs 1 e 2 connector; L1: line output 1; N: neutral output 1; L2: line output 2; N: neutral output 2.</p> <p>NOTE: in dimming mode the use of energy save lamps could damage the outputs module.</p>
2		<p>2 poles detachable connector; Maximum cable section: 2,5mm² (12AWG); Outputs power connector; L: output power line; N: output power neutral; GND: ground.</p>
3		<p>9 poles detachable connector; Maximum cable section: 1,5mm² (15AWG); 8 dry contact inputs connector; 1-8: inputs; C: common.</p>
4		<p>2 poles detachable connector; Maximum cable section: 1,5mm² (15AWG); EasyBUS connector; A: BUS A pole; B: BUS B pole. Be sure that cabling of BUS connector is consistent for all the modules in the network. This avoid bad working of the system.</p>
5		<p>2 poles detachable connector; Maximum cable section: 2,5mm² (12AWG); Electronic power supply connector; +: positive 20-28V_{DC}; C: negative 20-28V_{DC}. Be sure that all the negative poles of all the power supplies used for electronic are in parallel.</p> <p>NOTE: it is suggested to use a dedicated stabilized power supply for the electronic of all the modules inside a switchboard. It's important that modules installed into different switchboards connected together have negative poles in parallel (the use of YACHTICA® AMP 102D is suggested).</p>

 

#	CONNECTORS, LED, INDICATORS	DESCRIPTION
6		<p>Red LEDs indicating malfunction of the relative output, OUTPUT PROTECTION.</p> <ul style="list-style-type: none"> - Fixed LED: output short circuit; - Flashing LEDs (1 second frequency): no power supply for the relative outputs; (NOTE: the LEDs flash only after attempting to activate an output) - Flashing LED (3 pulses per second): output overload. <p>(NOTE: the load is not protected from short circuit with a fuse);</p>
7		<p>Blu LED, PWR.</p> <p>On if electronic power supply is given.</p>
8		<p>Orange LED, BUS.</p> <p><i>LED Blinking:</i> the module is connected to other modules in an EasyBUS network and is not the master module. Blinking frequency depends on the address of the module;</p> <p><i>LED On:</i> the module could be the master of an EasyBUS network or could fail to communicate with the rest of the network⁽¹⁾.</p>
9		<p>Buttons used to control the corresponding output, following "Dimmer without memory" function⁽²⁾.</p>
10		<p>DIP switches to set some standard programming.</p> <p>DIP 1 ON: OUT2 linked to OUT1. Outputs 1 and 2 are driven by I1 in parallel, I2 is not used. I3 and I4 are used to control the corresponding outputs.</p> <p>DIP 2 ON: OUT 1 in ON/OFF mode.</p> <p>DIP 3 ON: OUT 2 in ON/OFF mode.</p> <p>DIP 4 ON: Leading Edge mode (Trailing edge if OFF). Both outputs.</p>
11		<p>4 poles connector⁽³⁾ to manage the module (or the whole system) using the YACHTICA® MBC ETH o ICB 101X modules (not included).</p>

#	CONNECTORS, LED, INDICATORS	DESCRIPTION
12		<p>Programming, monitoring and control display.</p> <p>Control display allows to set some basic parameters of the module and to monitor the outputs status.</p>
13		<p>Setup button, SET.</p> <p>If pressed for 5s put the module in SETTING mode, allowing to set some parameters. If pressed for 5s while it is in setting mode it exit from it. In SETTING mode if short pressed scroll between the settable parameters.</p>
14		<p>Up and Down buttons, UP & DW.</p> <p>Scrolling buttons for display pages if not in SETTING mode. If the module is in SETTING mode they are used to set some internal parameters.</p>

(1)

See PROBLEM SOLVING paragraph.

(2)

See STANDARD PROGRAMMING paragraph.

(3)

Contact YACHTICA® to receive the dedicated interface cable to be used.

DISPLAY DESCRIPTION

INTRODUCTION

The module is equipped with a top board with a display and buttons for the setting and the management of some parameters without the needed of YACHTICA® software Cabot. Following the description of each screen with its features.

Use UP and DW buttons to scroll between the pages if the module is not in SETTING mode.


 



To enter in SETTING mode of the page displayed and set its parameters, keep pressed the SET button for 5 seconds. The first parameter will blink and it will be possible to use UP & DW buttons to choose the desired value. Once the value is set, press shortly SET buttons to pass to the next parameter.

To exit from SETTING mode keep press the SET button for 5 seconds or wait for 10 seconds until the blinking parameter stops.

Even in SETTING mode the buttons to control the outputs work.

PAGE 1: Control screen

 From this page is possible to see the 2 outputs status (by the percentage displayed) and the 8 inputs status. In SETTING mode it will be possible to set the address and the max address as well. In this page some alert icons are present.


#	LABEL, ICON	DESCRIPTION
1		Outputs percentage. Show the percentage of each output.
2		Inputs status. If an input is activated, a corresponding label will be shown on the display.
3		Outputs power supply. Show if a 230V _{AC} is present on the outputs. If the icon is not present, the corresponding couple of red FUSE LEDs on the front panel starts to blink according to the specification described in the previous section.
4		Address module, ADR. Address of the module. The value is settable between 1 and MAX-1. If the module is in SETTING mode, use UP & DW buttons to select the desired address. The default value is 32.
5		Max net address, MAX. Higher address of the modules inside the net (add 1 to this address is suggested). If the module is in SETTING mode, use UP & DW buttons to select the max value desired. The default value is 33. NOTE: a module cannot communicate with other modules of the same net if its address is higher than the MAX of the others (see Cabot manual).

PAGE 2: Output mode

From this page is possible to set the outputs function mode: DIMMING or ON/OFF.

Keep pressed SET button for 5 seconds to enter in SETTING mode of the first output. Use UP & DW buttons to choose between the two mode. Press shortly SET button to scroll to the next outputs.

Keep pressed SET button for 5 second or wait for 10 seconds to exit from SETTING mode.

#	LABEL, ICON	DESCRIPTION
1		Output modality, DIMMER-ON/OFF. For each output is indicated the corresponding output function mode.

PAGE 3: Module information

This page shows the hardware and software version of the module.

#	LABEL, ICON	DESCRIPTION
1		HARDWARE & SOFTWARE VERSION. Product hardware and software version.

INSTALLATION

Important notes

The following information are intended for the expert technicians who execute the installation and the extraordinary maintenance of the product. The installation and the maintenance of the module must be executed by qualified technicians, respecting the Norm of the installation country.

The expert technicians must have specific competences and particular abilities in order to carry out correctly and safely their work.

The constant observance of the information included in this manual guarantees safety of men, energy saving and a longer duration of product operative-life. Keep this manual and notes included.

In order to avoid wrong handling and the consequent risk of accidents, it is important to read this manual carefully, keeping scrupulously to guidelines according to the supplied information.

Electrical tension may cause shock and severe burns. Be sure to turn off the electrical supply before carrying out any type of work on the connectors. Omission of observation of these safety measures may cause death or severe lesions to people as well as great material damages.

Before preceeding with the use of the modules, make sure that electric installation, carried out by a qualified technician in conformity with the Technical Norms, corresponding to the class of homologation of the electrical system, is provided with the devices prescribed for the protection against direct and indirect contacts and electrical surcharges.

The modules of the YACHTICA® must be exclusively used in connection with other modules and external components which are conformed to the Norms comparative to the product.

Do not use the module if, upon visual inspection, it shows deterioration of the enclosing box or if the screening wraps of the feeding cables show any wear and tear or damage.

The YACHTICA® system may not be used to carry out safety and accident prevention functions since it does not have the redundancy requirements lawfully requested.

The installer must verify the correct installation and operation of the product.
It is prohibited to use the product for improper purposes or purposes different from those provided

V.Y.C. Srl shall not be held liable for any damage of any sort or kind in case of module used or installed incorrectly.

It is prohibited to tamper or to modify the product.

WIRING DIAGRAMS

Before starting

Place the module inside a switchboard and follow carefully the following wiring diagrams. The module can be installed on DIN rail.

Always switch off the electronic and outputs power supply before carrying out any type of electrical connection on the module.

NOTE: use a dedicated stabilized power supply for electronic modules installed into a switchboard. If into an EasyBUS network more than one power supply is used (for instance, one power supply for each switchboard containing YACHTICA® modules) be sure that all the negative poles of all the power supplies are in parallel (it is suggested to use YACHTICA® AMP 102D).

The module is intended for internal use. Install it in dry place in order to respect the specifications described in the TECHNICAL SPECIFICATIONS paragraph of this manual.

Blackout management

The YACHTICA® modules manage the states of lack of power supply both for the electronic and the power in case of dimming modules.

Lack of electronic power supply (all modules).

In case of lack of this tension the module switch off. After the blackout the outputs come back to their latest values before the blackout.

Lack of power supply for outputs (dimmer modules).

In case of lack of power supply for the outputs, the dimmer modules show this with a blinking of FUSE PROTECTION LED and the lighting icons on the display will disappear. After the blackout, if no problem occurs, the outputs come back to their latest values.

Addressing

Each YACHTICA® module placed into an EasyBUS network must have a unic address. The default address for all YACHTICA® modules is 32 and Max Address 33. Before connect the BUS connectors of more modules in the same net, be sure that they have a different address. It is possible to address the module using the display.

It is possible to change the address of a module using the YACHTICA® programming software Cabot.

NOTE: a madule cannot communicate with other modules in the same net if its Address is upper than the Max Address of the others (see Cabot manual).

Shown below the wiring diagram that can be used when installing a DMK 802LX module.

NOTE: all the YACHTICA® modules installed in an EasyBUS network must have the negative pole of electronic power supply in parallel. If this specification is not verified unexpected behaviour of the system can happen.

NOTE: it is not possible to wire an EasyBUS network in a ring. If this specification is not verified unexpected behaviour of the system can happen.

To link different switchboards with YACHTICA® modules inside it is suggested to use AMP 102D module.

For particular wiring ask for YACHTICA® assistance.

WARNING: it is suggested to protect each output properly (fuse), according to the wiring present on board. Choose proper size of protections according to the section of the cables used and according to the load connected.

CAUTION: verify carefully that the terminal blocks are fully insert in their position and that the wires are fully insert in their position and screwed correctly. Any wrong wiring, considering the high rate of currents running in the module, could cause an excessive overheating. It is suggested to protect the power input section in order to avoid any loop of current due to wrong wiring in the field, not monitored by the module itself.


CAUTION: the terminal block are tested and certified for use with flexible or rigid cord. The component builder does not contemplate the use of tips whose use is the responsibility of the installer. In this case it is recommended the utmost attention in the crimping that must be uniform on all 4 sides to avoid the creation of contact tips.

NOTE: since important currents are circulating inside the module, it is advisable, prior to the delivery of the plant, to check with a thermal gun the overheating state of the module in order to immediately highlight any anomalies external loads or incorrect connections.

NOTE: it is suggested to protect each output properly (fuse), according to the wiring present on board. Choose proper size of protections according to the section of the cables used and according to the load connected.



SCHEME 1: Direct wiring on the module

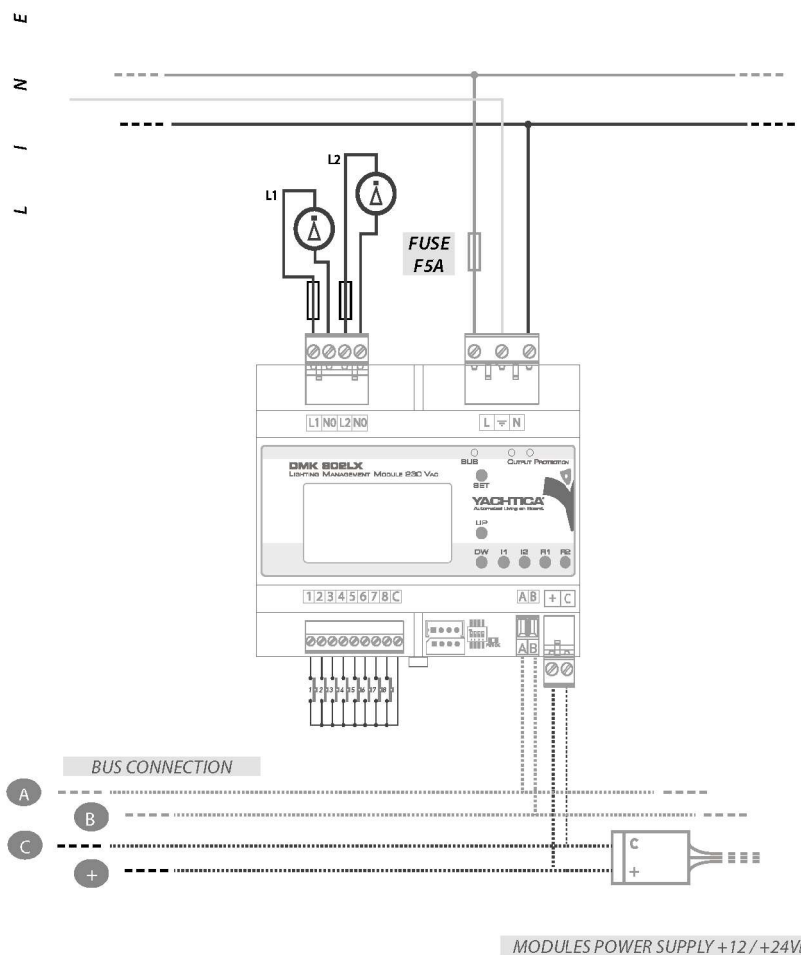

PROGRAMMING

PROGRAMMAZIONE STANDARD

Each DMK 802LX module has a standard programming that allows it to be used with its 8 dry contact inputs. Each input is associated with a particular functionality. The functionalities of the inputs can be tested using Cabot.

NOTE

Buttons I1 and I2 on the top board do the Dimmer without memory function: long press does the dimming of the output; short press switch on and off the output at 100% with a ramp. The memory of the value reached with a long press is lost. If in On/Off mode the outputs will work according to On/Off Toggle function. Buttons I3 and I4 do the On/Off Toggle function.

# IN	FUNCTION NAME	DESCRIPTION
1-2-3-4	Dimmer With Memory (On/Off Toggle)	2 Outputs control commands: IN1 and IN2 - Short press: switch on and off corresponding output to its last value, in 3 seconds. - Long press: allows the dimming of the corresponding output. When reaching 100% and 0%, the dimming process stops for 2 seconds, in order to select these particular values. When releasing the button the output stops to the reached value. IN3 and IN4: switch the outputs 1 and 2 in On/Off mode.
5	All On Scene	Command for a 2 outputs scene control. - Short press: switch on and off the outputs to 100% in 3 seconds. - Long press: allows the dimming of the 4 outputs. The outputs start dimming to low values, getting synchronized when reaching 0%, then raising towards 100% values. If one output is in ON/OFF mode the value will switch at 100%.
6	Welcome Scene	Command used to set 2 outputs to 60% in 3 seconds. If one output is in ON/OFF mode the value will switch at 100%.
7	Night Scene	Command used to set 2 outputs to 20% in 3 seconds. If one output is in ON/OFF mode the value will switch at 100%.
8	All Off Scene	Command used to set 4 outputs to 0% in 2 seconds.

Programming with Cabot

The module can be programmed using the YACHTICA® software Cabot. Read the manual of the software for all the information needed about Cabot and the module programming.

For programming examples surf the link www.yachtica.com

For advanced programming requested contact YACHTICA® technical department if needed.

PROBLEM SOLVING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Module does not switch on	The module doesn't receive power supply on the electronic power supply connector	Check that dedicated power supply is working properly, providing right output voltage according to the specifications written in this manual.
	Positive and negative cabling poles inverted	Check that dedicated power supply positive and negative poles are connected in the right way.
The module is switched on but the outputs connected don't switch on	The module doesn't receive output power supply (Red fuse LED blinking once per second).	Check that 12/24V _{DC} dedicated output power supply is working properly, providing right output voltage.
	One or more outputs are in short circuit (Red fuse LED on for corresponding output).	Check the cabling for the outputs. There's a short circuit on the output corresponding to the fuse LED switched on.
	One or more outputs are in overload (Red fuse LED blinking 3 times per second for corresponding output)	Check that the load connected to each output of the module is under 16A. Check also that the switchboard temperature in which the module is installed is not too high; hot places can reduce the maximum load of the outputs.
The module has the BUS LED always on but its address is not the lowest used in the network	The module has address higher than the MAX ADR of the module with lowest address in the network	Check the MAX ADR value of the module with lowest address in the network. Set the address of the module according to that value.
	Communication BUS card damaged	Communication BUS card needs to be replaced (ask help to YACHTICA® technicians).
	Problem on the BUS cable	Check the cabling of all the BUS chains connected to the same loop of the module. Short circuit or inversion on A-B poles can be present.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Nothing happens while pressing a button connected to an input of the module	The module is in Override mode	Check that OVR input is not activated.
	The input has no functionality programmed	Use Cabot software to check the programming of the module, in particular for the not working input.
	Broken cable problem	Check that while pressing the button the corresponding label on the display is switched on. Check cabling in case it doesn't happen.
One or more outputs floats between two different intensity level	Overload problem (Red fuse LED blinking 3 times per second for corresponding output)	Check the power load connected to the output and be sure that it is under the max load rating of the module. Check also the switchboard temperature where the module is installed, being sure it's not too high for best performance of the module.

NOTE

REPAIR AND WARRANTY POLICIES

Merchandise returns

No V.Y.C. Srl merchandise may be returned for credit, exchange or service without prior authorization from V.Y.C. Srl. To obtain warranty service for V.Y.C. Srl products, contact V.Y.C. Srl or an authorized dealer. Request for an RMA (Return Merchandise Authorization) and fill it in properly all the fields, before returning the module. Shipments arriving freight collect or without RMA number shall be subject to refusal.

Return freight charges following repair of items under warranty shall be paid by V.Y.C. Srl, shipping by standard ground carrier. In the event repairs are found to be non-warranty, return freight costs shall be paid by the purchaser. V.Y.C. Srl will provide repairing costs in case the merchandise is not under warranty.

V.Y.C. Srl limited warranty

V.Y.C. Srl warrants YACHTICA® products to be free from manufacturing defects in materials and workmanship under normal use for a period of 2 years from the date of purchase.

This warranty extends to products purchased directly from V.Y.C. Srl or an authorized YACHTICA® dealer.

V.Y.C. Srl shall not be liable to honor the terms of warranty if the product has been used in any application other than that for which it was intended or if it has been subject to misuse, accidental damage, modification or improper installation procedures

Furthermore, this warranty does not cover any products that has had the warranty void label altered, defaced or removed.

V.Y.C. Srl shall, at its option, repair or replace any product found defective, without charge for parts or labor. Repaired or replaced equipment and parts supplied under this warranty shall be covered only by the unexpired portion of the warranty.

Except as expressly set forth in this warranty, V.Y.C. Srl makes no other warranties, expressed or implied, nor authorizes any other party to offer any warranty, including any implied warranties of merchantability or fitness for a particular purpose. Any implied warranties that may be imposed by law are limited to the terms of this limited warranty.

This warranty statement supersedes all previous warranties.



www.yachtica.com

V.Y.C. S.r.l. reserve the rights to change the specification and data herewith without a notice.
© 2026 by V.Y.C S.r.l. - All Rights Reserved.